




1

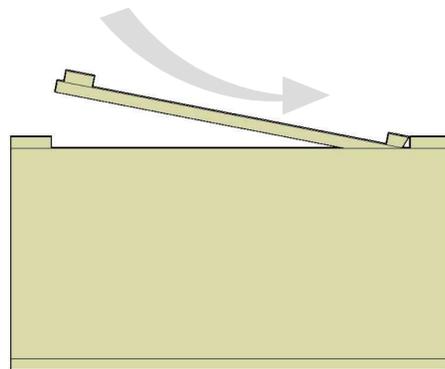

3


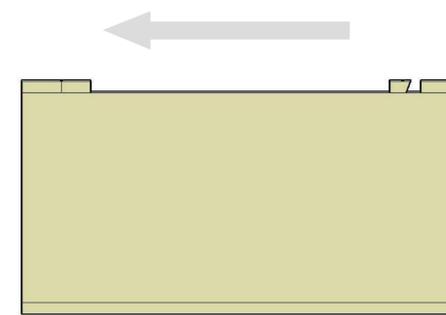


2

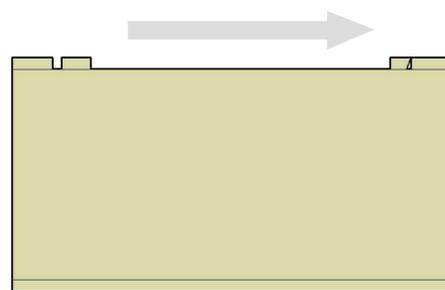


4

Faire glisser le couvercle et insérer la clef pour fermer la boîte

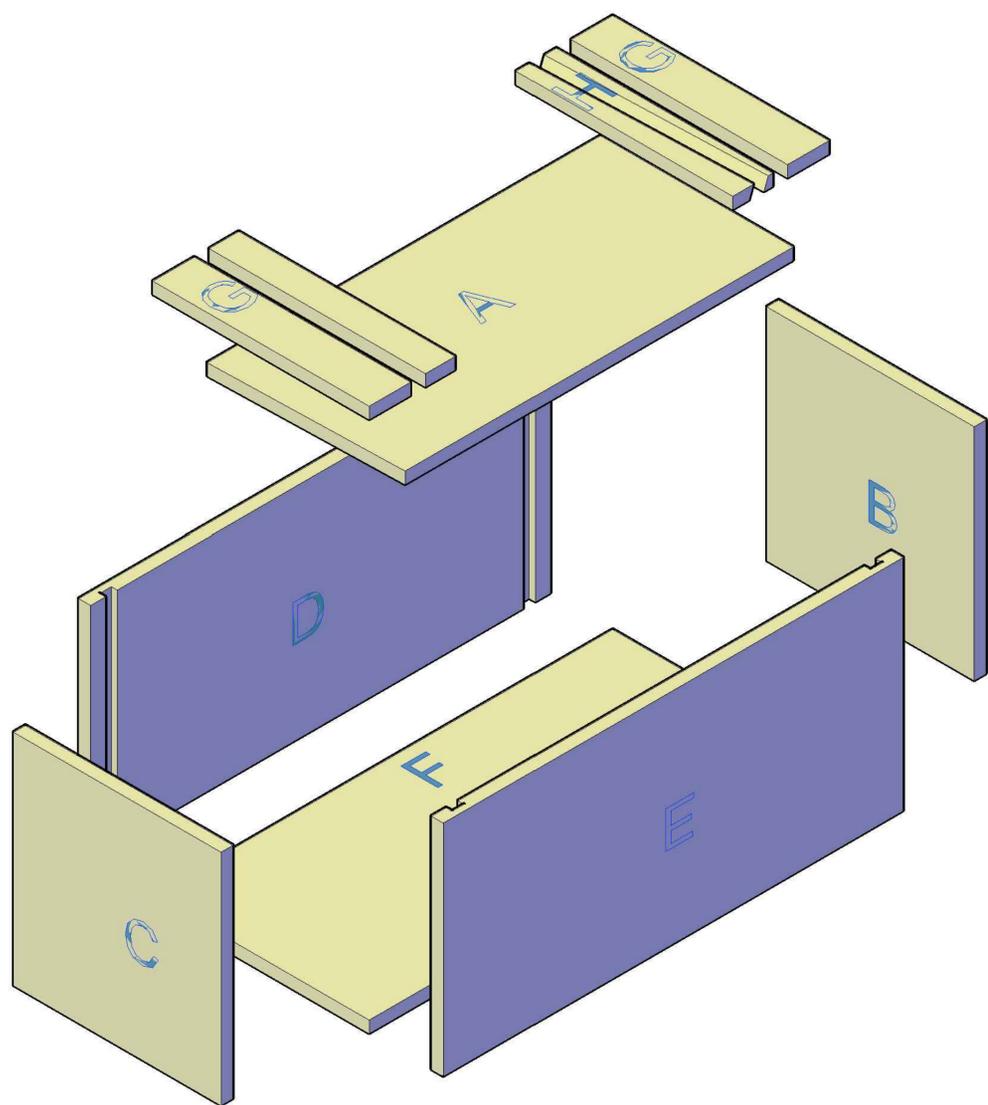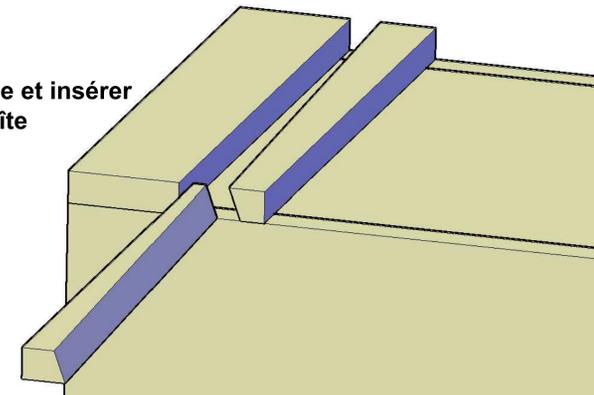

0,69

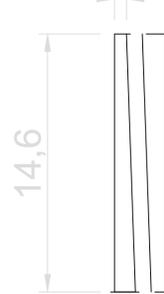


H



1,4

 2,8



G




G

31



D

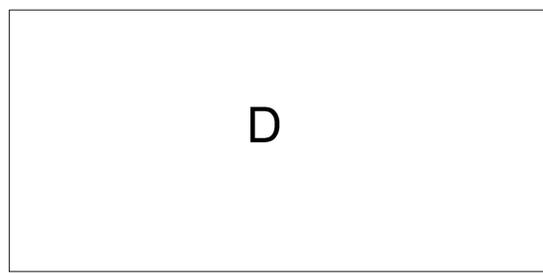


13

26,15




A

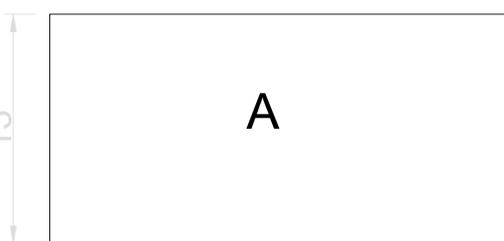

31



 E




14


14



B

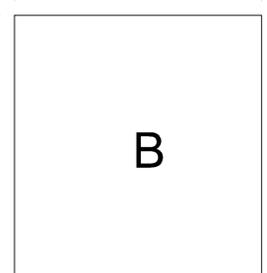

C

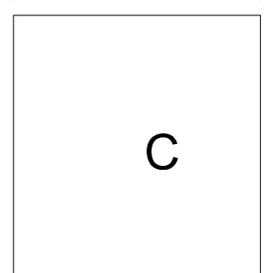

31



G

